

# FHC P2 Series "C" Strike

## Rim Panic Exit Device

"C" Strike" Installation Instructions

### FHC P2 Series "C" Strike Mounting Instructions

#### MOUNTING INSTRUCTIONS:

- PREPARE LOCK STILE PER TEMPLATE NO. 10–935 DRILL CYLINDER MOUNTING HOLES IF REQUIRED.
   LOCATE CENTERLINE OF CYLINDER ON EXTERIOR OF DOOR AND

- 2. LOCATE CENTERINE OF CTLINDER ON EXTERIOR OF DOOR AND DRILL IF REQUIRED.

  3. TRIM TAIL PIECE TO FIT INTO PANIC DRIVE BUSHING ASSEMBLY.

  4. MOUNT CHUNDER AND SECURE WITH MOUNTING SOREWS
  (SUPPLIED BY LOCK MFG.)IF TRIM IS REQ'D PREP. PER 10–997
- LOCATE MOUNTING HOLE ON INACTIVE STILE DRILL & TAP 1/4-20 THDS. 40"(1016) FROM BTM. OF DOOR.

- REMOVE FRONT AND REAR END BASE COVERS BY RELEASING 6-32 3/16(5) FLAT HD. SCREWS. SECURE ACTIVE END OF PANIC BY INSTALLING EACH 12-24x1/2 (13) PAN HD.M.S.
- SECURE INACTIVE END WITH SINGLE 1/4-20x1/2(13) ROUND HD. M.S. (PHIL.) WITH SEMS THROUGH INACTIVE BASE PLATE. PROCEED BY RE-INSTALLING BASE COVERS ON EACH END OF PANIC BASE.


- RE-INSTRUME DASE, COVERS ON EACH END OF FANNE DASE.


  8. TO INSTALL STRIKE LOCATE 10-24 TAPS ON ACTIVE STILE (2 PLACES).

  9. MOUNT AND SECURE STRIKE. (REF. DETAIL "S")

  10. CHECK OPERATION OF ALL PARTS INCLUDING CYLINDER IF BEING USED TO ASSURE PROPER OPERATION.

THE SAFETY FEATURES OF THIS PRODUCT ARE ESSENTIAL TO IT'S COMPLIANCE WITH EN 1125. NO MODIFICATION OF ANY KIND, OTHER THAN THOSE DESCRIBED IN THESE INSTRUCTIONS, ARE

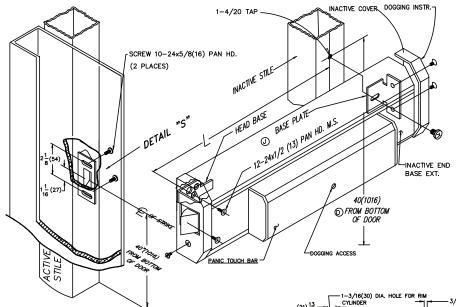

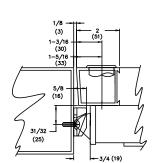


OFFSET HUNG INST.

#### **DOGGING INSTRUCTIONS:**

TO DOG-INSERT HEX. KEY TURN CLOCKWISE UNTIL IT STOPS, FULLY DEPRESS TOUCH BAR THEN RELEASE.

TO UNDOG-INSERT HEX KEY TURN CLOCKWISE UNTIL IT STOPS, TOUCH BAR WILL RELEASE.

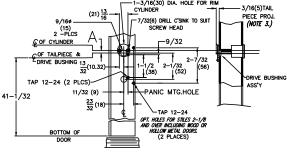



FRAMELESS HARDWARE COMPANY 4361 Firestone Blvd. South Gate, CA 90280 Toll Free: (888) 295-4531 | Fax: 323 336-8307 | Web: fhc-usa.com

PAGE 1 of 1 LIT0276C 07.19.23