

FHC P2 Series Concealed Vertical Rod Panic Exit Device Mounting Installation Instructions

FHC P2 Series Mounting Instructions


1. PREPARE ACTIVE STILE INSIDE FACE PER SHT. 2 OF 2, OR USE TEMPLATE 10-942

- \bigcirc
- 2. INSTALL ROD & CASE ASSY INTO ACTIVE STILE, SECURE WITH 2 EA. 8-32× 1/4 SOC. HD. CAP SCREWS. 3. INSTALL TOP & BOTTOM STRIKES WITH 2 EA. ∯8x3/4(19) SELF-TAP SCREWS. 6. IF TAM OR CLUNDER ARE NOT BEING USED, SKIP NOTE 5. ⑤ AS PER LOCK PAD VIEW SHOWN, INSTALL ONE 8-32 PAN HD. SCREW PARTILLY 10 ADV HOUSEN, WITH HOUSEN OF A CONSTRUCTION OF A CONSTRUCTION
- (2) AS PER LOCK PAD VIEW SHOWN, INSTALL ONE 8-32 PAN HOJ. SCHEW PARIALT TO SUT NOMMA WALL THRCNESS OF 1/8° OR 3/16°. INSTALL PAD ASS'Y, AND ROTATE CLOCKWISE UNTIL IT LOCKS INTO POSITION, NOW INSTALL SINGLE 8-32 × 1-15/16° SOREW & TIGHTEN.
 NOTE: USE 8-328/5/30° PAN HD, ON 1/8° WALL THICKNESS USE 8-328/5/30° PAN HD, ON 3/16° WALL THICKNESS USE 8-328/5/30° PAN HD, ON 3/16° WALL THICKNESS
 IF TRIM IS BEING USEG/FOLOW INSTALLTATION GUIDE NO. 10-990 (WITH TRIM).
 UNDOG PANIC DEVICE PER DOGGING INSTRUCTION LABLE ON ACTIVE COVER. ⊕

7. PANIC ATTACHMENT

- REMOVE FRONT AND REAR END BASE COVERS BY RELEASING 6-32x3/16(5) REMOVE HRVNI AND REAR END BASE COVERS ET RELEASING 6-223(163) FLAT HD. SCHERK SECURE ACTIVE END OF PANIG ET NISTLAING ONE 12-241-1/4(32) FILISTER HD. SCREW THROUGH CHASSIS AND ONE 8-321-1/4 SOC.HD MS, SECURE INACTIVE END WITH SINGLE 1/4-201/2(13) ROUND HD. MS, (PHLL) WITH SEMS THROUGH INACTIVE BASE PLATE. RECEED BY
- M.S. (HML, WHI SEMS INFOUND INACINE BASE PLAIE. PROCED BY RE-INSTILLING BASE COVERS ON EACH END OF PANIC BASE. 8. ADJUST TOP & BOTTOM BOLTS ALLOWING FOR 1/2⁽¹3) OF BOLT TO EXTEND FROM VERTICAL STILE (REF. DETAIL³) INSTALL BOLT GUIDES TOP & BOTTOM WITH (2) EACH #10x1/2⁽¹3) FL. HD. SELF-TAPPING SOREMS. (SEE BOTTOM OF BOLT SHOULD LOCK IN THE RETRACTED (UNLOCKED) POSITION. IF LOCKING DOES NOT OCCUR READJUST BOLTS W/HALF TURN INCREMENTS UNTIL LOCKING OCCURS. VERIFY OPERATION BY FULLY DEPRESSING TOUCH BAR TO ACHIEVE DOGGING OR FULL RETRACTION OF BOLTS.

- TOP BOLT ADJUSTMENT: 1. RELEASE TOP AND BOTTOM BOLTS BY DEPRESSING TRIGGER ON TOP BOLT GUIDE ASSEMBLY.
- 2. POSITION TOP BOLT 1/2"(13) FROM TOP EDGE OF ACTIVE STILE. BOTTOM BOLT ADJUSTMENT:
- 1. FULLY DEPRESS PUSH BAR, RETRACTING TOP AND BOTTOM RODS. ADJUST BOTTOM BOLT PER DETAIL "B' MANUAL CHECK:
- IN WITH TOP AND BOTTOM BOLTS FULLY RETRACTED, DEPRESS TRIGGER RELEASE, ROOS WILL THEN EXTEND TO THE LOCKED POSITION.
 2. INSTALL TRIP BROKET (REF.DETAIL"") AND ADJIST SET SCREW SO THAT WHEN DOOR CLOSES, TOP BOLT GUIDE TRIGGER CONTACTS SET SCREW AND ALLOWS BOLTS TO EXTEND.
 DOGRAMS INSTRUCTIONS:
 DO DO REPET VIEW REF. THEN CLOCKWESE HINTH IT. STORE CLUEN DEPRESS.
- TO DOG- INSERT HEX. KEY TURN CLOCKWISE UNTIL IT STOPS, FULLY DEPRESS TOUCH BAR THEN RELEASE. TO UNDOG-INSERT HEX KEY TURN CLOCKWISE UNTIL IT STOPS, TOUCH BAR WILL RELEASE.

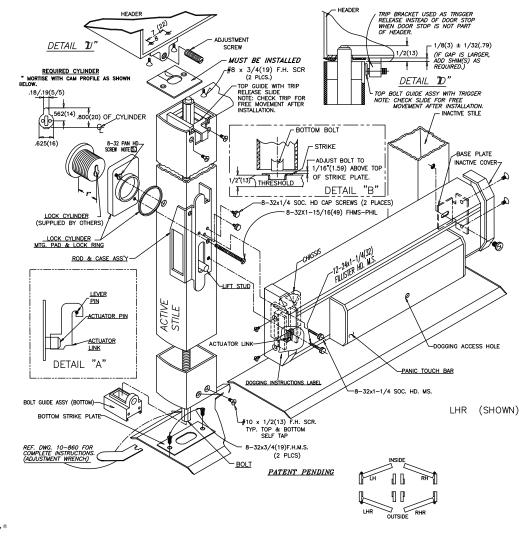

FRAMELESS HARDWARE COMPANY 4361 Firestone Blvd. South Gate, CA 90280 Toll Free: (888) 295-4531 | Fax: 323 336-8307 | Web: fhc-usa.com